

# ROSWELL

WAKE-AIR


## S.I. Caddy Rack Installation Guidelines

Thank you for purchasing the best wakeboard racks in the world. We at Roswell started a revolution in the wakeboard industry back in 1998 and continue to push known boundaries today. We are fully committed to pushing the envelope beyond industry expectations everyday to make your wakeboarding experience more enjoyable. With the input of our team riders in 2007 our goal remains redefining the wakeboard industry day in and day out. We will not be confined to our desk; we are out on the water testing our full line of products to take any unnecessary hassle out of your wake experience. Thank-you again for choosing Roswell and keep an eye out for more dominating technology throughout the season...

Sincerely,

Robert Oswell  
Owner, Designer, Wakeboarder

*Tools Needed:*  
*Allan Wrench Set*

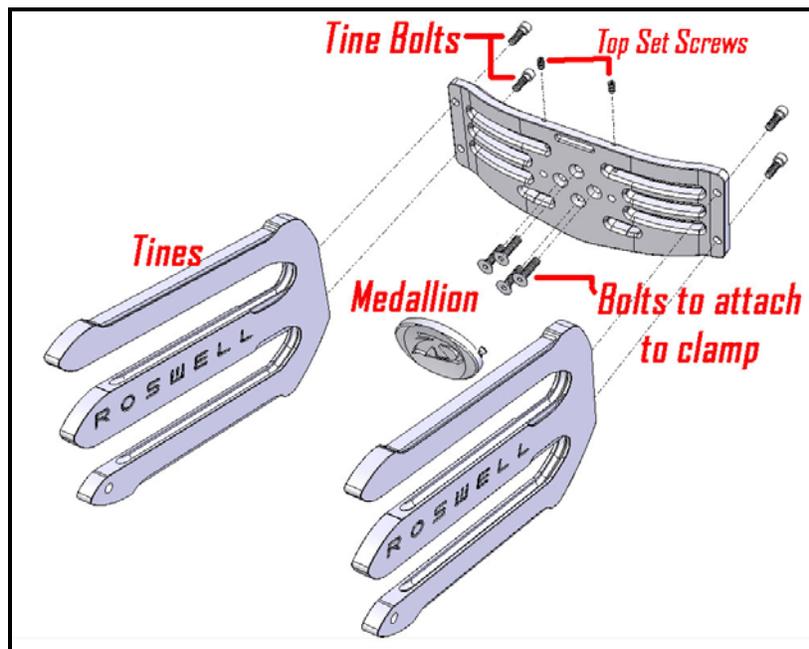

Comments, Concerns, Ideas? Email us at [Roswell@roswellwakeair.com](mailto:Roswell@roswellwakeair.com) or check out our website at [www.roswellwakeair.com](http://www.roswellwakeair.com)

## Pre-Installation

1. Remove the billet medallion from the backing plate by unscrewing the top two set screws. You will then be able pull the medallion of the backing plate.
2. Attach the billet tines to the backing plate with the provided socket head cap screws making sure that the bungee clip is the right side up to align with the slot on the backing plate. \*Lock Tite must be used\*

## Clamp Installation

1. If you are installing the racks with a clamp you will initially need to decide on a place for mounting. We suggest the rear leg of the tower up and out of the driver's line of sight.
2. Tighten the clamp around the rear leg at the desired height with the cluster of inserts facing outside the boat. *\*If you are installing a swivel with your clamp you will need to mount the clamp low enough on the leg to allow the rack to swivel into the boat with a board in the top slot.\**

## Board Rack Installation

1. Line up the board rack backing plate with the inserts on the clamp. You want the rack to be as close to horizontally level as possible. The tines should be angled slightly upwards
2. Fasten the rack to tower with the 4 bolts provided. Tighten snugly (use a little wakeboard muscle) Use Lock-Tite to **help** prevent the rack from loosening over time.
3. Replace medallion and re-insert the top two set screws. Use Lock-Tite

## Board Test

1. Insert board(s): Billet tines should slide between bindings. Please ensure that the board is secure.
  1. Top Slot- Bindings facing upwards
  2. Bottom Slot- Bindings facing downwards
2. Pull bungee strap over the edge of both boards and clip strap to the rack.
3. Enjoy your new found boat space and have a rip for us!

Note- If your board is a little too tight in the billet tines you can use a knife to carefully cut away some of the rubber- Be careful not to remove too much or the board may make contact with the tine and could cause rubbing/scratching.

Comments, Concerns, Ideas? Email us at [Roswell@roswellwakeair.com](mailto:Roswell@roswellwakeair.com) or check out our website at [www.roswellwakeair.com](http://www.roswellwakeair.com)